



SPARE PARTS LIST 22 Ton Hydraulic Air Axle Jack

Model # 23221


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	A07-5-1108-105	Saddle	1	46	507-9-0064-013	Hose Assy.	1
2	A07-5-1802-101	Cover	1	47	G53-6-2203-106	Air Valve Hook	1
3	A07-3-1100-501	Extension Screw Assy	1	48	A27-3-2050-109	Air Valve	1
4	A07-5-1101-101	Extension Screw	1	49	A07-4-2900-100	Filter	1
5	512-2-0447-102	Spring	1	50	A24-6-8101-107	Male Coupler	1
6*	541-7-0560-105	Dust Seal	1	51	A22-4-2040-107	Air Valve Assy & Hose	1
7*	511-7-0560-101	O-ring	1	52	A09-6-3221-101	Cover Plate	1
8	A07-5-1801-109	Top Nut	1	53	A09-3-3001-109	Frame Assy.	1
9*	514-3-0933-019	Gasket	1	54	609-1-0050-10911	Screw	5
10	A07-5-1203-106	Piston Rod	1	55	605-3-0100-203	Spring Washer	5
11	A07-6-1209-208	Ram Bearing	1	56	653-1-0100-106	Bolt	4
12	A07-6-1209-107	Ram Bearing	1	57	667-5-0127-005	Snap ring	2
13*	577-7-0580-015	Back-up Ring	1	58	611-3-0130-101	Washer	2
14*	521-7-0450-001	U-cup	1	59	A07-4-3400-509	Rubber Wheel	2
15	A09-3-1601-103	Base Assy.	1	60	A07-6-3230-300	Wheel Axle	2
16*	324-4-1900-208	Filler Screw Assy.	1	61	644-1-0060-05311	Socket Head Bolt	2
17	324-6-1902-305	Filler Screw	1	62	A09-6-3124-104	Base Plate	1
18	511-7-0090-403	O-ring	1	63	421-6-2202-209	Release Knob	1
19	523-2-0196-016	Return Spring	4	64	601-4-0040-034	Spring Pin	1
20	649-1-0060-020	Socket Head Bolt	4	65	A22-5-2304-101	Release Linker (I)	1
21	A59-6-2405-106	Set Screw	2	66	614-1-0040-00811	Screw	1
22*	532-3-0127-106	Special Washer	2	67	A22-6-2304-107	Release Linker (II)	1
23	512-2-0110-107	Compression Spring	1	68	506-9-0280-104	Handle Grip	2
24	601-7-0014-013	Steel Ball D11mm	1	69	605-3-0050-103	Spring Washer	1
25	521-2-0062-011	Compression Spring	1	70	110-6-1317-108	Washer	1
26	601-7-0009-001	Steel Ball	1	71	A22-3-2201-109	Handle	1
27	414-6-1215-509	Set Screw	3	72	A35-6-7001-103	Positioning Bar	1
28*	H18-6-8103-104	Special Washer	3	73	421-6-0100-100	Rubber Grip	1
29	A09-6-1602-204	Valve Base	1	74	602-4-0025-017	Cotter Pin	1
30	441-6-1216-107	Nail	1	75	A07-6-2204-102	Washer	1
31	512-2-0067-010	Compression Spring	1	76	524-2-0138-019	Compression Spring	1
32	414-6-1215-307	Safety Valve Screw	1	77	511-3-0105-011	Washer	1
33*	511-7-0080-400	O-ring	1	78	A07-6-2109-108	Bar Housing	1
34	509-9-0145-109	Safety Valve Cap	1	79	601-4-0030-040	Spring Pin	1
35*	511-7-0110-403	O-ring	2	80	A07-6-2106-203	Positioning Head	1
36	486-6-1302-100	Gasket	1	81	A09-4-2200-106	Handle Assy.	1
37	653-1-0060-072	Bolt	1	82	A07-6-1301-105	Handle Fork	1
38*	554-7-0062-007	Oil Seal	1	83	653-1-0100-014	Bolt	1
39	A09-6-1701-105	Release Valve	1	84	A07-6-1109-103	Adapter	1
40	G10-4-1101-104	Screw Assy.	1	85	A09-6-1104-107	Adapter Holder	1
41	A09-1-1001-217	Hydraulic Unit	1	86	653-1-0080-02511	Screw	2
42	649-1-0050-019	Socket Head Bolt	1	87	661-2-0080-023	Nut	2
43	A07-3-3300-307	Flexible Joint Assy.	1	(*)	A09-3-9901-206	Repair Kit	-
44*	515-3-0140-103	Copper Gasket	1				
45	G53-3-2000-205	Air Pump	1				

* Repair Kit includes 6, 7, 9, 13, 14, 16, 22, 28, 33, 35, 38 & 44



22 Ton Hydraulic Air Axle Jack

Model # 23221

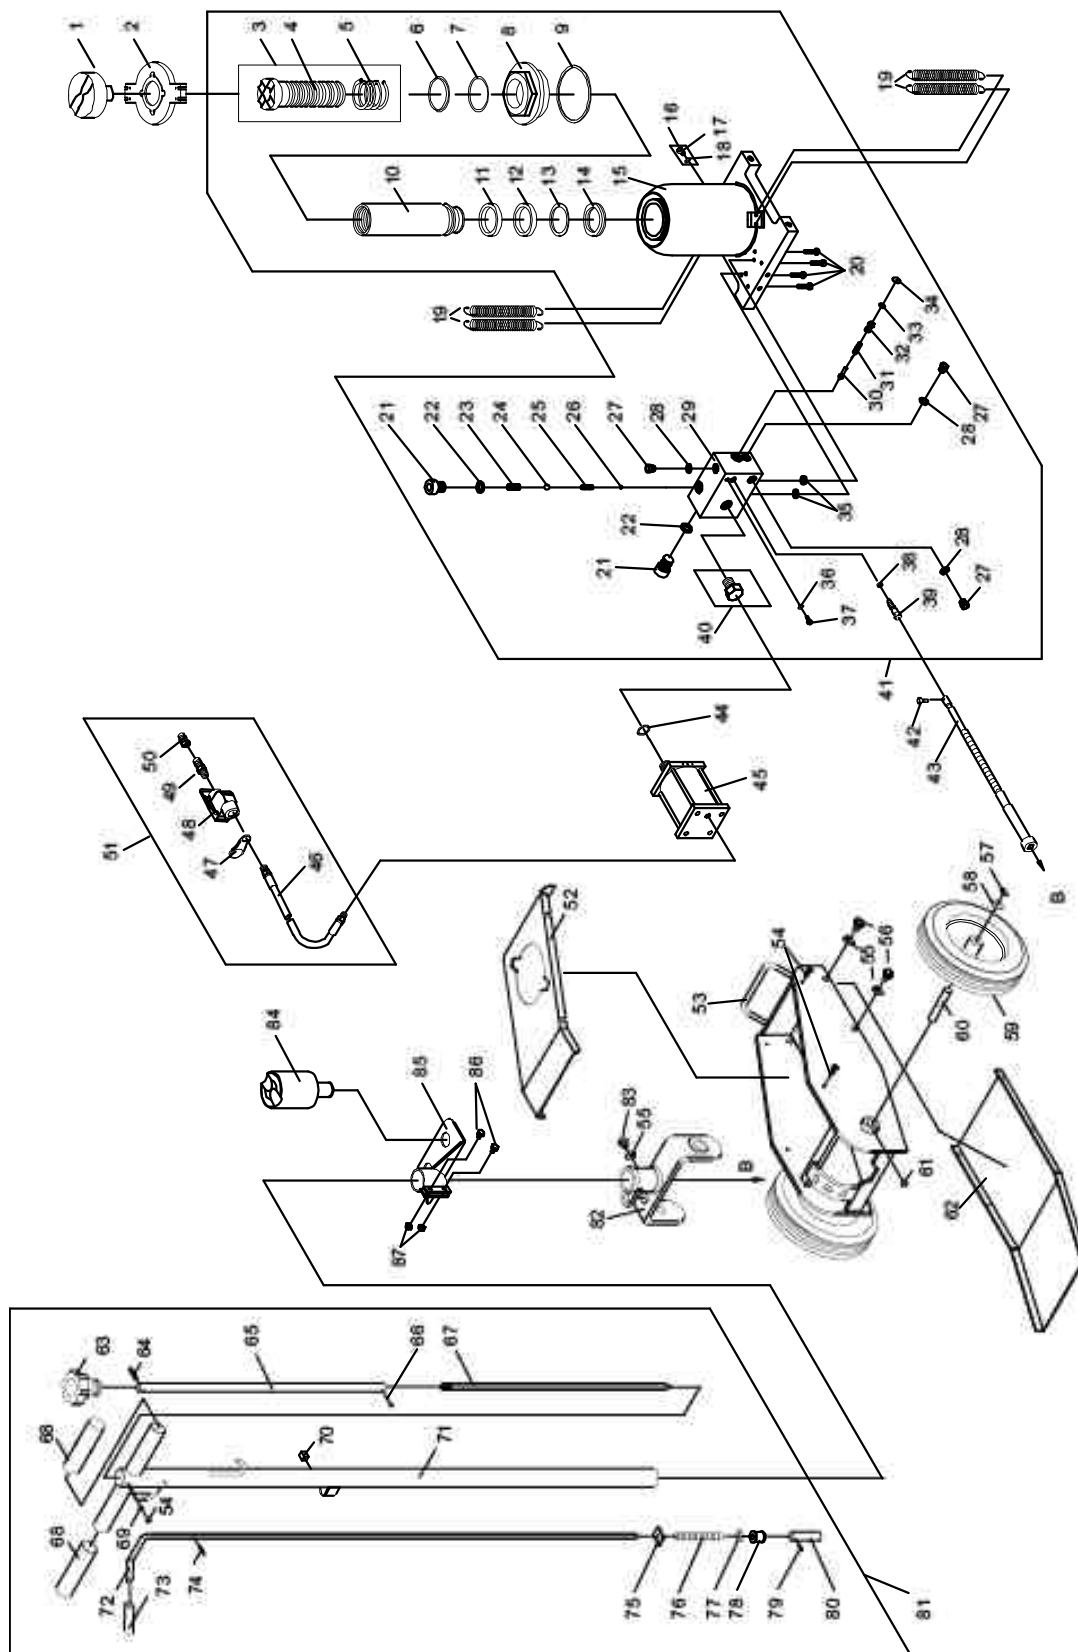

Exploded Drawing
4th Edition © Aug. 2005