




IMPORTANT


DURING TRANSPORTATION OR THE LIFTING OPERATION, AIR-BOUND MAY OCCUR. DO THE FOLLOWING STEPS TO BLEED AIR IF THE RAM PLUNGER IS PUMPED UP SLOWLY OR CAN NOT BE PUMPED UP.

1

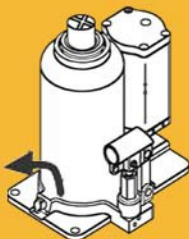

OPEN THE RELEASE VALVE BY TURNING IT COUNTER CLOCKWISE FOR 1/2 ~ 3/4 TURN.

2

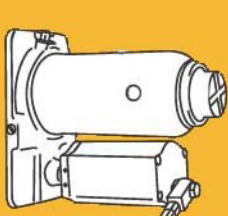


TURN THE JACK 90 DEGREE TO ITS HORIZONTAL POSITION. BE SURE THAT THE AIR MOTOR SHOULD BE UNDERNEATH THE RAM PLUNGER ASSEMBLY.

3



CONNECT THE AIR PISTOL TO THE AIR SOURCE AND PRESS THE AIR PISTOL FOR 5 ~ 10 SECONDS TO OPERATE THE JACK.

4

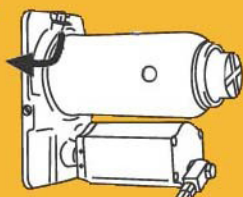

TIGHTEN THE RELEASE VALVE BY TURN IT CLOCKWISE WHILE THE JACK REMAINS AT ITS HORIZONTAL POSITION.