

BEADBAZOOKA®

Gaither PROFESSIONAL EQUIPMENT

New 2" BEAD BAZOOKA®

Gaither's BB3L2 / BB6L2 / BB10L2

More Power & More Speed



Gaither®
PROFESSIONAL EQUIPMENT
Original instructions




Every Bead Bazooka® includes a wall Clip(GB-56) that can be placed on the work shop wall with simple wood or metal screws: (For safe storage always return the Bead Bazooka® back to its wall clip storage position)



DO NOT PLACE THE BARREL FIRMLY AGAINST THE RIM,

but instead it should be held 2-3" away from the wheel flange when firing for better overall lift and performance

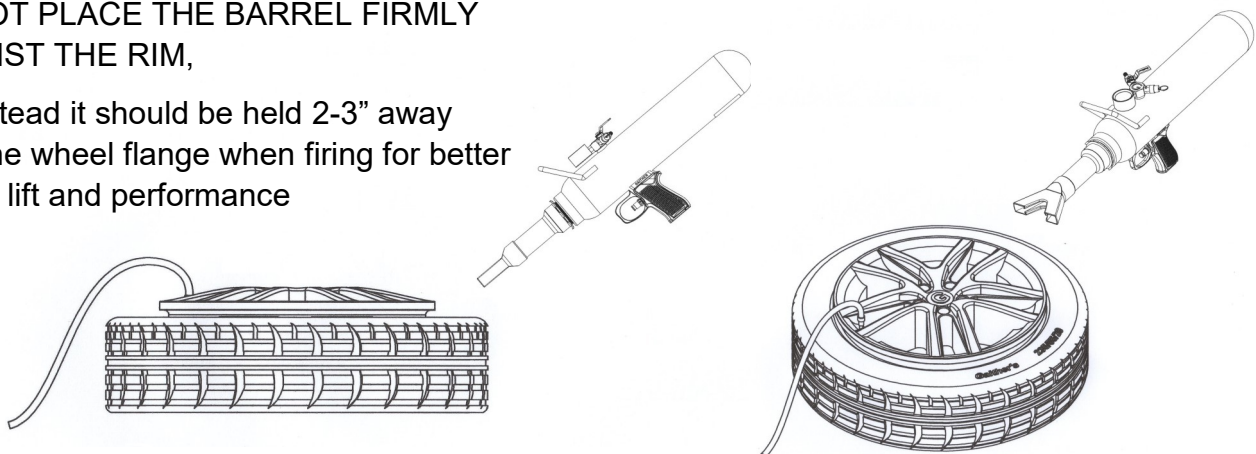

CAUTION:

AFTER THE BEAD HAS BEEN SET TO THE WHEEL, STOP THE AIR FLOW TO THE VALVE STEM, PLACE A VALVE CORE IN THE STEM, AND MOVE THE TIRE / WHEEL ASSEMBLY TO A TIRE INFLATION CAGE AND THEN CONTINUE INFLATING TO THE MANUFACTURER'S RECOMMENDED OPERATING PRESSURE.

WARNING:

COMPRESSED AIR IS DANGEROUS - ALWAYS WEAR EYE AND EAR PROTECTION. ALWAYS FOLLOW THE INSTRUCTIONS GIVEN ABOVE. THE BEAD BAZOOKA® IS A TOOL FOR THE TIRE INDUSTRY AND SHOULD NEVER BE USED OTHERWISE. THIS TOOL IS NOT A GUN. THIS TOOL IS NOT A TOY AND SHOULD NEVER BE USED FOR ANYTHING EXCEPT ITS SPECIFIED USE.

Note:



DO NOT DROP


Drop damage could void your warranty!

Gaither New 2" Bead Bazooka® Repair kit


BBVRK

F.	12958	2" Piston-40mm w/ O-Ring
G.	12959	2" Gaither Wrench
H.	12950	2" W 1.7 O-Ring

The Bead Bazooka® Valve Repair Kit, or BBVRK, is a new tool that lets the user repair/replace the piston/valve of the Bead Bazooka®. The BBVRK is intended to extend the lifespan of the Bead Bazooka® by making the Bead Bazooka® fully serviceable. This kit saves the user precious time because the repairs can be done quickly and effectively in house.

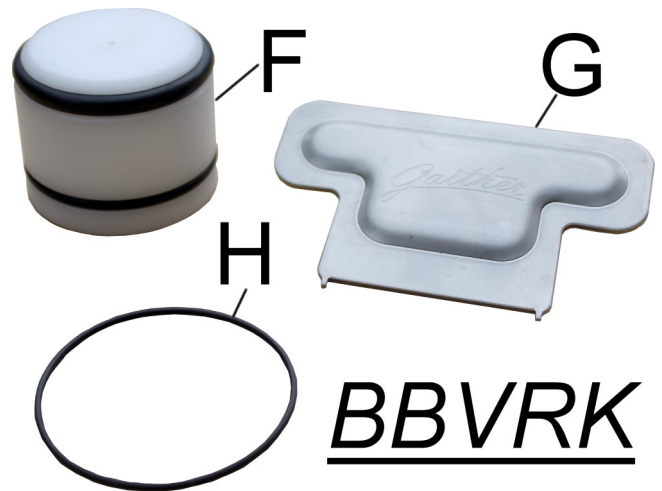

How To Use BBVRK

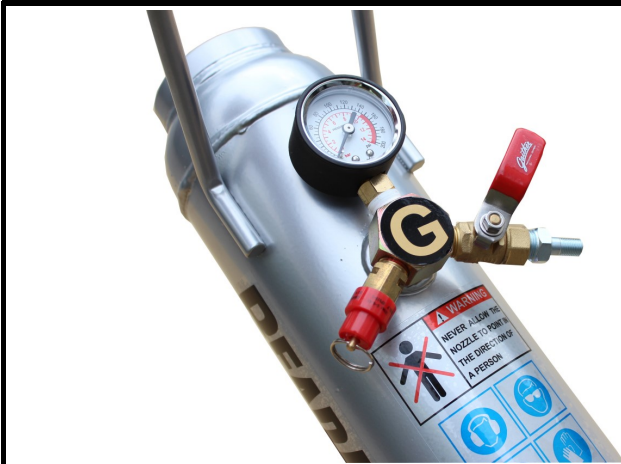


1. Check the Pressure Gauge
No Air - 0 bar. / 0 psi.



2. Bead Bazooka® place the wall clip storage position



3. Use G / Gaither Wrench

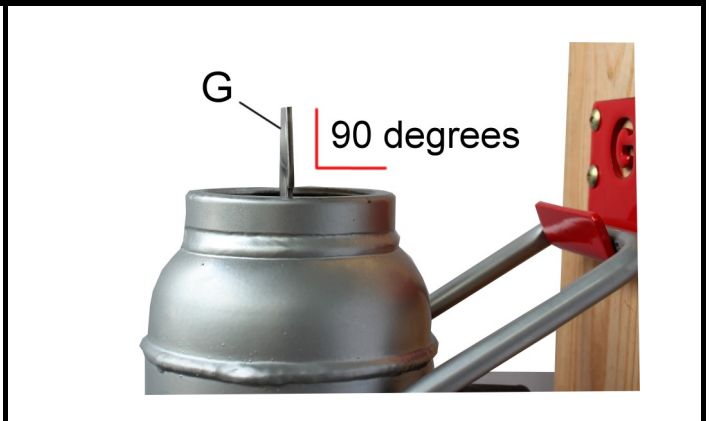

4. Right angle 90 degrees

A



B



Use WD-40
Wait 2~3 minutes

A



B



C



5. Press down with your left hand.

Turn counterclockwise with your right hand



6. Replace F & H after opening



Bead Bazooka® Care

For best performance, please add silicone oil or air tool oil to the RAR Valve every 1~2 months by performing the following steps:

- 1.Remove the barrel.
- 2.Push the piston down.
- 3.Apply silicone oil or air tool oil to the upper part of the piston.
- 4.Apply the oil to the edge of the piston. (Black O-Ring)
- 5.Press the piston repeatedly until the oil flow into the interior of valve.



Care and Maintenance :

- Indoor use only
- Avoid this product under the sun or heat exposure
- Often maintenance can increase the time usage of the product
- Use often, please maintenance weekly
- In order to avoid parts damage, do not use this product in the rain
- Recommend using silicone oil for maintaining piston, in order to avoid damage to the parts.

WARNING:

- COMPRESSED AIR IS DANGEROUS - ALWAYS WEAR EYE AND EAR PROTECTION. ALWAYS FOLLOW THE INSTRUCTIONS GIVEN ABOVE.
- THE BEAD BAZOOKA® IS A TOOL FOR THE TIRE INDUSTRY AND SHOULD NEVER BE USED OTHERWISE.
- The product should operate by professionals.
- Never allow the nozzle to point in the direction of a person
- Please vent the rest of air after use.
- Do not try to disassemble or modify the product.
- Please Keep away from children

Repair and Troubleshooting :

- Read the instructions and check BEAD BAZOOKA® to see whether there are missing parts or damaged parts.
- If the Bead Booster can not be used, please contact the store for repair.