

REPLACEMENT PARTS

Not all components of the jack are replacement items, but are illustrated as a convenient reference of location and position in the assembly sequence. When ordering parts, give Model number, serial number and parts description. Call or write for current pricing: SFA Companies Inc. 10939 N. Pomona Ave. Kansas City, MO 64153, U.S.A. Tel:(888)332-6419 Fax:(816)891-6599 E-Mail:sales@omegalift.com Omega Website: <http://www.omegalift.com>

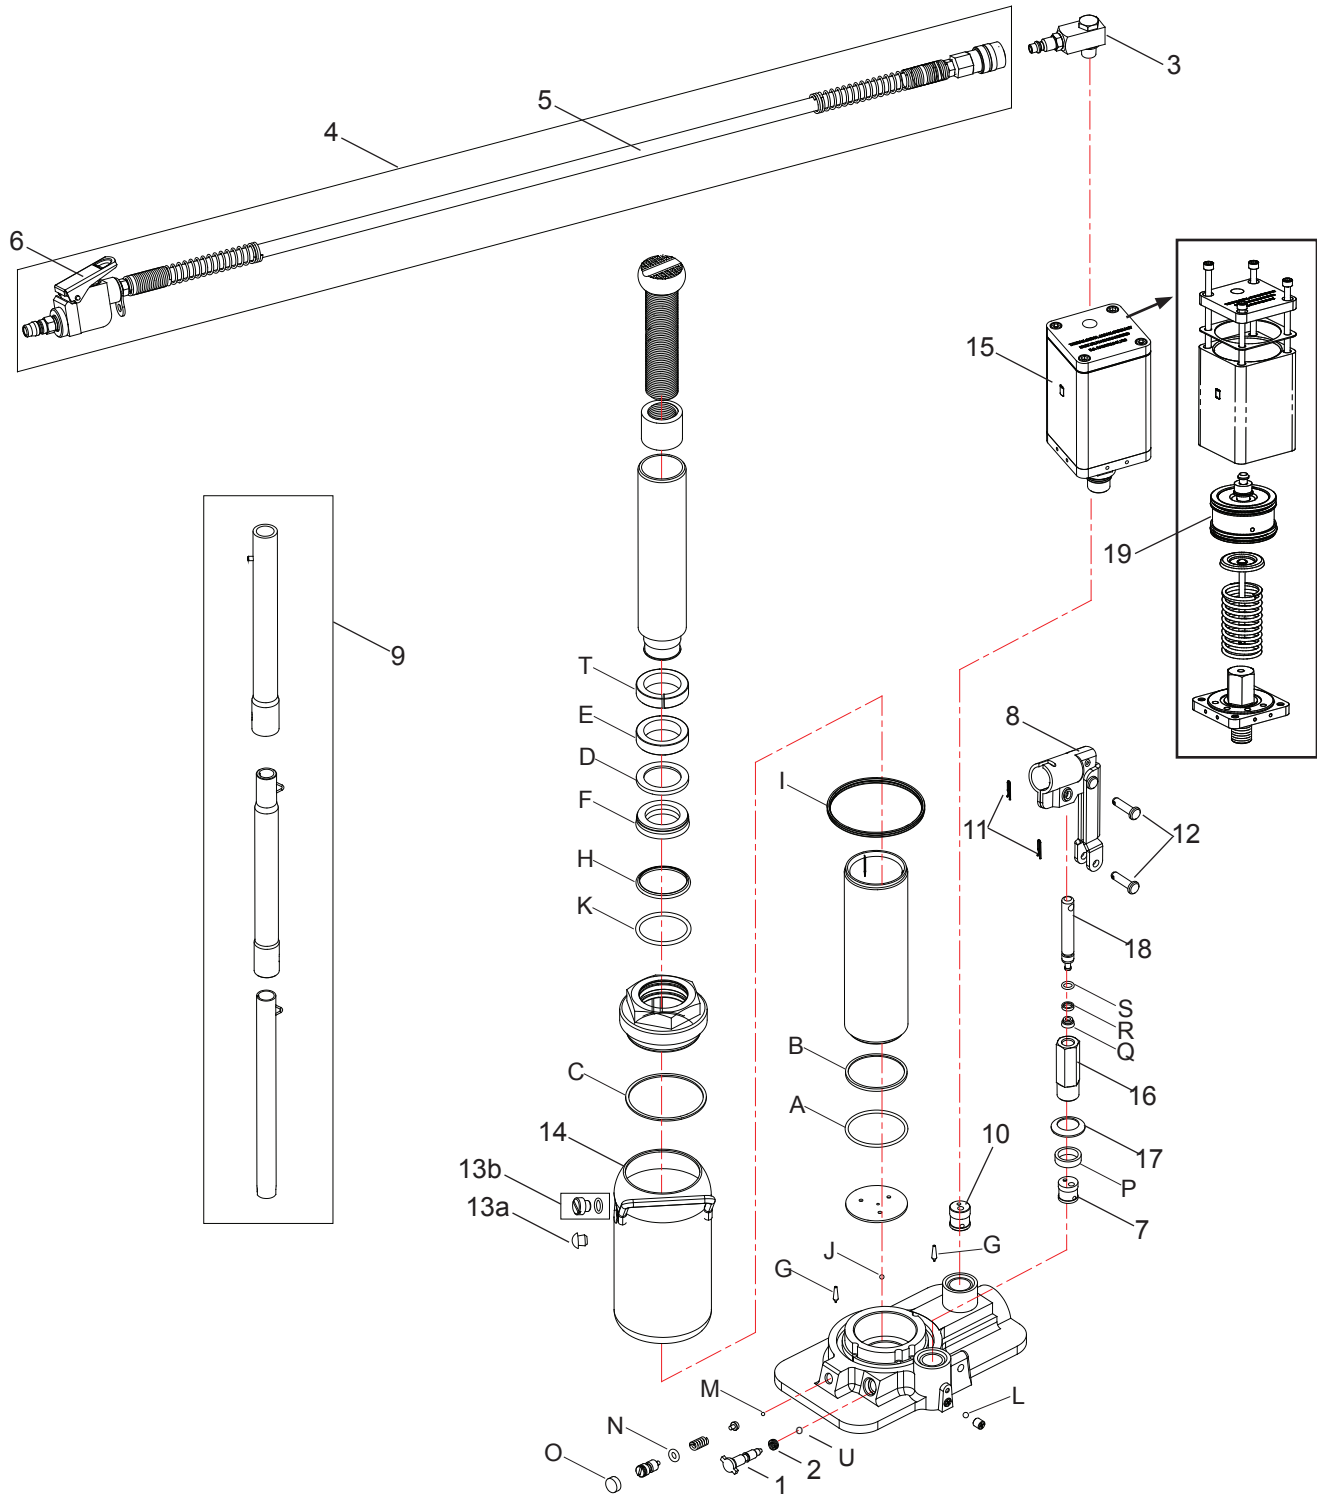


Figure 2 - Replacement Parts Illustration for Model 18125 & 18205 (18205 shown)

Replacement Parts List for Model 18125 & 18205

Item	Part# for 18125	Part# for 18205	Description	Qty
1	A20060-0003	A20060-0003	Release Valve	1
2	A20060-0004	A20060-0004	O-ring	1
3	A27010-0002	A27010-0002	Air Inlet Swivel	1
4	A20060-0005	A20060-0005	Air Hose Assembly	1
5	A20060-0006	A20060-0006	Air Hose	1
6	A20060-0007	A20060-0007	Lift Control Valve	1
7	B20600-0001	B20600-0001	Hyd. Cartridge	1
8	A20060-0008	A20060-0008	Handle Socket	1
9	A20060-0001	A20060-0001	Handle Assy.	1
10	A20060-0009	A20060-0009	Hyd. Cartridge	1
11	F36100-0002	F36100-0002	Snap Pin	2
12	A20060-0010	A20060-0010	Pin	2
13a	F36100-0001	N/A	Filler Plug	1
13b	N/A	A20060-0002	Filler Screw	1
14	A24060-0002	A20060-0013	Reservoir	1
15	A27010-0001	A27010-0001	Air Motor	1
16	A20060-0011	A20060-0011	Pump Cylinder	1
17	B20600-0002	B20600-0002	Washer	1
18	A20060-0014	A20060-0014	Pump Piston	1
19	A270-01100-0000	A270-01100-0000	Piston, Air Motor	1
20	A24060-0000	A20060-0000	Seal Kit (includes 2,13 & A ~ T)	1
21	A27010-0000	A27010-0000	Seal Kit, Air Motor #15	1
22	18125-L0	18205-L0	Label (s)	1
23	18125-M1	18205-M1	Manual	1

Seal Kit (Item#20) Contents:

Item	Description	Qty
2	O-ring	1
13	Filler Plug/ Screw	1
A	O-ring	1
B	Back-up Ring	1
C	O-ring	1
D	Back-up Ring	1
E	Ram Bearing	1
F	U-cup	1
G	Filter	2
H	Dust Seal	1
I	Oil Seal	1

Item	Description	Qty
J	Steel Ball, D4	1
K	O-ring	1
L	Steel Ball, D5	1
M	Steel Ball, D3	1
N	Seal	1
O	Safety Valve Cap	1
P	U-seal	1
Q	U-cup	1
R	Back-up Ring	1
S	O-ring	1
T	O-ring (for 18205 only)	1
U	Steel Ball, D6	

(**) **Replacement requires special skills, knowledge, and equipment. Only** an authorized service center may perform the repair and/or replacement of these items. Contact Omega technical service for list of service centers.